

RAIN HEAD





KEEP THIS INSTRUCTION BOOKLET FOR FUTURE REFERENCE

Important: Santec reserves the right to request additional documents before servicing warranty requests.

SANTEC has the right to make necessary design changes where applicable.

*Illustration may not depict actual products

INSTALLATION INSTRUCTIONS

WARNING: Do not use excessive force when threading on the shower arm.



Step 1:


Wrap the end of the threads with

Teflon tape and thread onto the pipe in the wall.



Step 2:

Apply silicone around the hole and press the flange to secure its position.

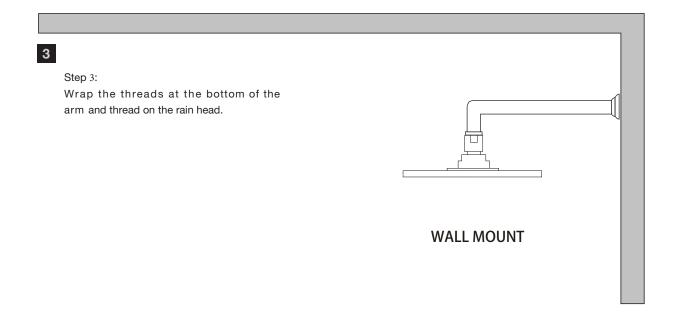

For proper functioning of the rain head please note the following:

3/4" shower valve is required (reduce to ½" at the shower arm)