


# SANTEC




FLUID IMAGINATION

RAIN HEAD

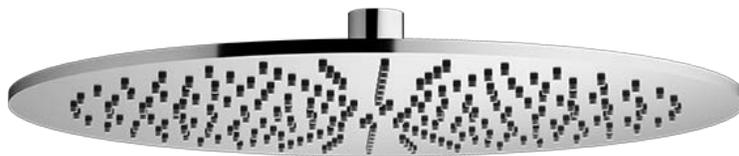

# INSTALLATION INSTRUCTIONS

---

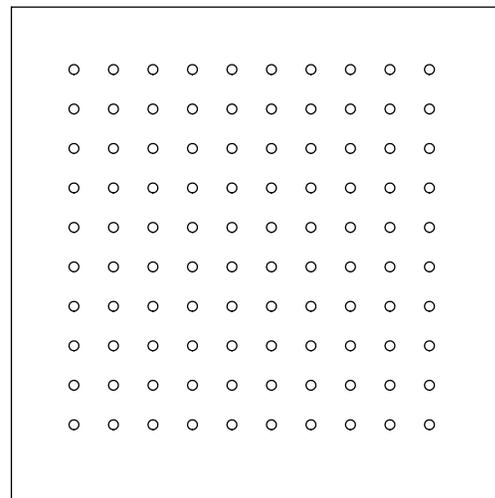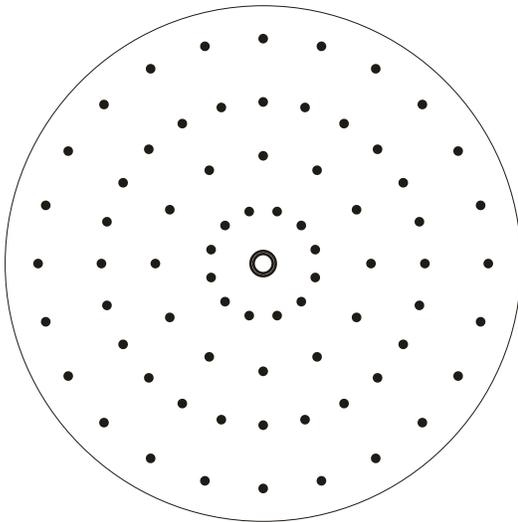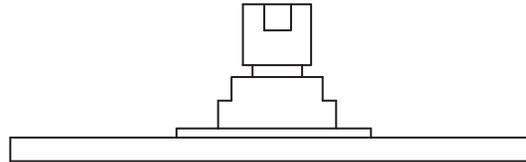

# INSTALLATION INSTRUCTIONS

---


**WARNING:** Do not use excessive force when threading on the shower arm.

**1**

Step 1:  
Wrap the end of the threads with  
Teflon tape and thread onto the pipe in the wall.

**2**

Step 2:  
Apply silicone around the hole and press the flange to  
secure its position.

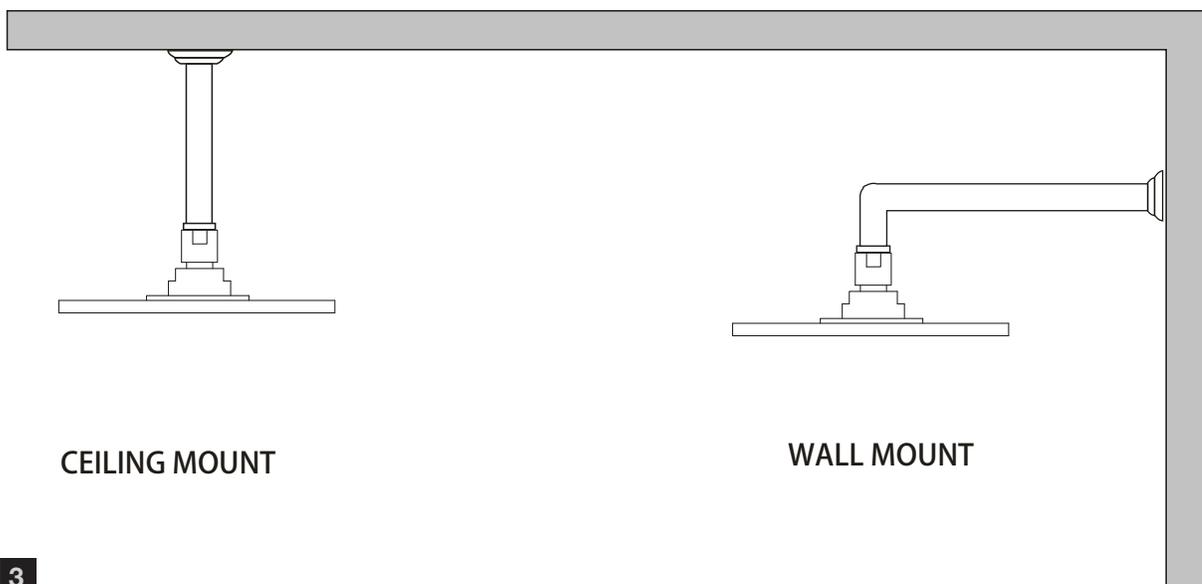

**3**

Step 3:  
Wrap the threads at the bottom of the  
arm and thread on the rain head.