

HANA COLLECTION

YY-HD-TM YY-DI-TM

ITEM NUMBER

'HD & DI' STYLE HANDLE TRIM FOR 4-PORT, 5-PORT AND STOP VALVES





TEST FOR PROPER FUNCTION BEFORE CLOSING WALLS!

FLUSH BOTH SUPPLY LINES BEFORE INSTALLATION AFTER FLUSHING, SHUT OFF BOTH SUPPLY LINES.

MINIMUM HOLE SIZE FOR THE HANDLE TRIMS IS 15/8" AND MAXIMUM OF 13/4"


INSTALLATION INSTRUCTION


INSTALLING THE VALVE WITH THE TRIM

- 1- Install the valve onto the wall with at least 2-1/2" space between the center of the valve inlet and the finished wall.
- 2- Screw the extension all thread and stem onto the valve making sure it is all the way in.
- Mark the extension all thread flushed to the wall, remove it and cut.

Do the same with the stem but this time cut 1/4" less than the extension thread in order to attach handle.

4- Cut off the excess All Thread and Stem (remember to cut the Stem 1/4" shorter)

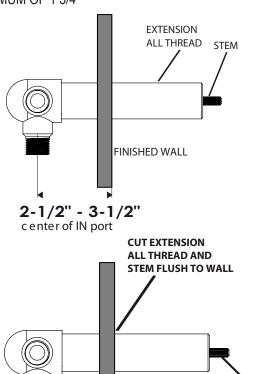

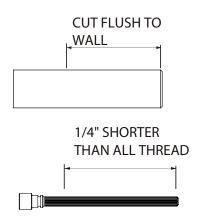


CUT STEM 1/4"

SHORTER FOR HANDLE INSTALLATION

INSTALLATION INSTRUCTIONS

5 - Replace the handle onto the stem. Tighten the handle set screw firmly.

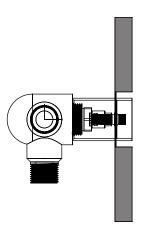

6 - Apply the finish trim.

