


MODEL NUMBER



## DESIGNER SERIES HANA COLLECTION HAND TOWEL BAR

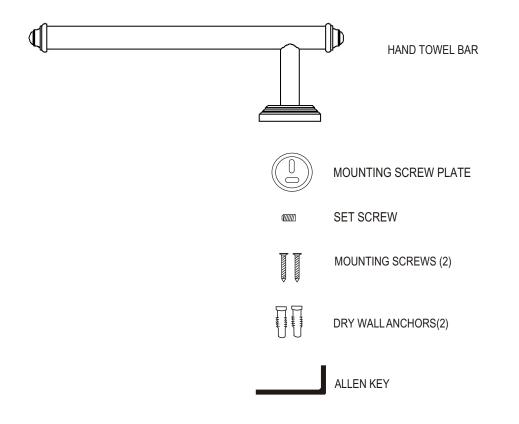

INSPECTED BY

## INSTALLATION INSTRUCTIONS

1- Take the hand towel bar out of the box. Place the trim parts against the assigned wall location. Make sure that the bar is leveled and pointed to the right.

Mark the post position and remove the trim.

2- Using the Allen key provided, remove the mounting screw plates from the

ring posts.

Press the mounting screw plate against ring post position on the

wall and mark the screw hole positions.

2a- INSTALLING ON WOODEN SURFACE

- For wooden surface, the mounting screw plates can be secured by screwing the screws directly into the wall.

### 2b- INSTALLING ON A DRYWALL


- Using a drill, pre-drill holes for the anchors.
- Insert the anchors into the wall.
- The mounting screw plate can be secured by screwing the screws into the anchors.
- 2c- IF INSTALLING ON A SOLID/HARD SURFACE
  - Measure the dimensions carefully.
  - Using a drill, pre-drill the holes.
  - Secure the mounting screw plate by screwing the screws into the wall.
- 3- Press the post against the mounting screw plate. Align the post and secure it by tightening the set screw.
- 4- Check the post to make sure it is firmly secured. If not, tighten the set screw with the Allen key.

WOODEN SURFACE


pointing right


# post flange mark mounting screw plate

### DRY WALL SURFACE



HARD SURFACE



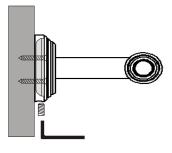

WALL

Santec Inc. 3501 Challenger Street, Torrance, CA 90503 Tel: (310) 542-0063 Fax (310) 542-5681 www.santecfaucet.com

07/04