

MODEL NUMBER

4166TR \_


# DESIGNER SERIES HANA COLLECTION ROBE HOOK



INSPECTED BY

## INSTALLATION INSTRUCTIONS

Take the hook post out of the box.
Place the post against the assigned wall location.
Make sure that the hook is leveled.
Mark the post flange position and remove the trim.

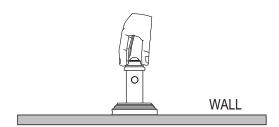

2- Using the Allen key provided, remove the mounting screw plate from the

hook post.

Press the mounting screw plate against marked hook post position on the

wall and mark the screw hole positions.


2a- INSTALLING ON WOODEN SURFACE

- For wooden surface, the mounting screw plate can be secured by screwing the screws directly into the wall.


#### 2b- INSTALLING ON A DRYWALL

- Using a drill, pre-drill holes for the anchors.
- Insert the anchors into the wall.
- The mounting screw plate can be secured by screwing the screws into the anchors.
- 2c- IF INSTALLING ON A SOLID/HARD SURFACE
  - Measure the dimensions carefully.
  - Using a drill, pre-drill the holes.
  - Secure the mounting screw plate by screwing the screws into the wall.
- 3- Press the hook post against the mounting screw plate. Align the hook post and secure it by tightening the set screw.
- 4- Check the hook post to make sure it is firmly secured. If not, tighten the set screw with the Allen key.


### WOODEN SURFACE




#### DRY WALL SURFACE



#### HARD SURFACE



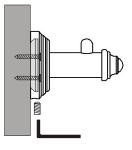

Santec Inc. 3501 Challenger Street, Torrance, CA 90503 Tel: (310) 542-0063 Fax (310) 542-5681 www.santecfaucet.com

07/04